


Length is measured from under the head to the end of the bolt

Note: Head sizes may differ from what is shown due to differences between metric standards

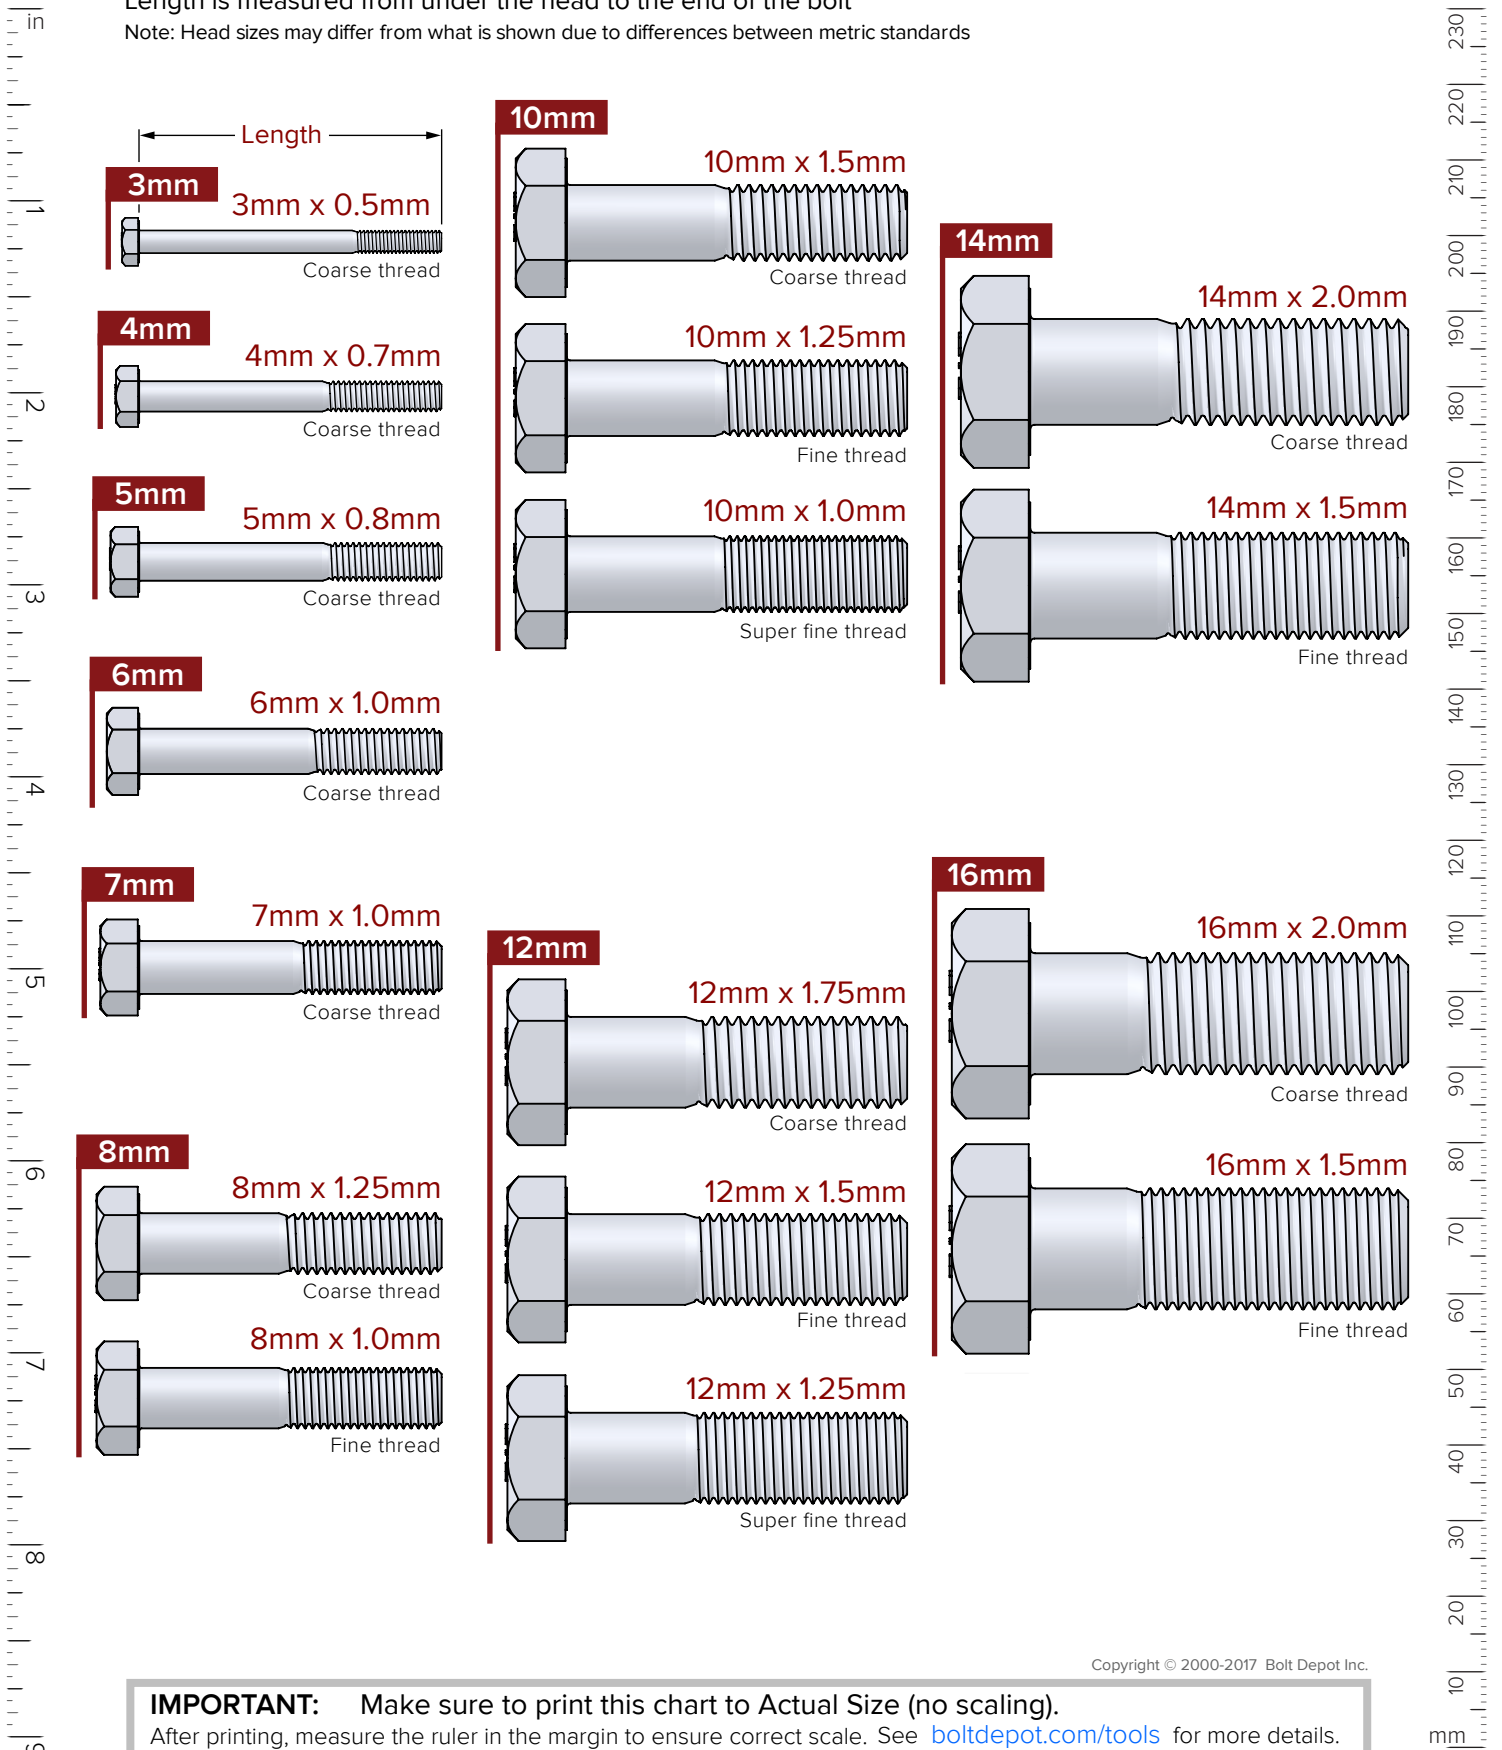

IMPORTANT: Make sure to print this chart to Actual Size (no scaling).

After printing, measure the ruler in the margin to ensure correct scale. See boltdepot.com/tools for more details.